### **ACCESSORIES**

### **ROTARY VALVE ACCESSORIES**

# MPA Mini-Pneumatic Actuator

□ Max. Temperature: 125°C
 (higher temperature version available)
 □ Operating Pressure: 65 - 80 psig

□ Full Stroke : 95°
□ Oven mount

□ Standoff: 2", 4" and 6"



# PNC Pneumatic Actuator

☐ Max. Temperature: 180°C

□ Operating Pressure : 65 - 80 psig

□ Full Stroke : 95°
□ Direct mount

□ Standoff: 2", 4" and 6"

☐ Adjustable Stopper, No mechanical stress

transfer to the valve rotor



# MEA Mini-Electric Actuator

- ☐ Max. Temperature: 65°C
- Multi-Position
- □ Direct mount
- □ Standoff: 2", 4" and 6"
- □ Software controlled adjustable end of travel position



# MAC Manual actuator, ergonomic design



# STANDOFF Available in: 2", 4" and 6"




### **ACCESSORIES COND'T**


# 3 WAY AND 5 WAY SOLENOIDS AND MANIFOLDS USED FOR VALVE ACTUATION AND ROTARY ACTUATOR

### □ Includes:


- LED
- Snubber
- Manual override
- Connector
- Wires

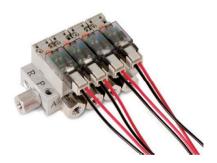


### ☐ 3-WAY EXAMPLE

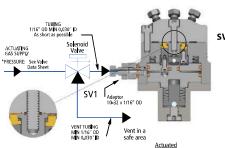


**SV1:** 3-way miniature electric solenoid valve.

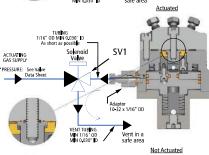


### DV ACTUATION TUBING SETUP

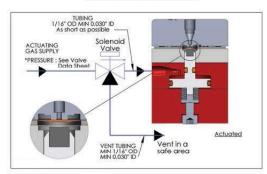

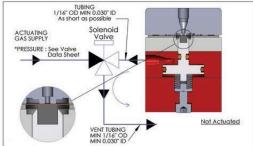

### □ 5-WAY EXAMPLE

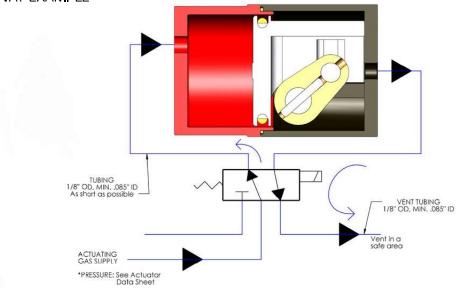





### **ACCESSORIES COND'T**

### **IRV** VARIABLE ROTOR LOADING GENERAL INSTRUMENTATION ROTORY VALVE

- ☐ No stem packing / No stem blow out
- ☐ Purge groove design, eliminating the need for stem packing
- ☐ Purge acts as a dynamic seal
- □ No fugitive emission or inboard/outboard contamination
- ☐ Eliminates cross-port leak.
- □ No ball seals or valve seats (No flow around leak)
- ☐ Self-cleaning upon rotation reduces wear, increases life
- ☐ Allows monitoring of valve health in critical applications



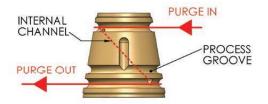

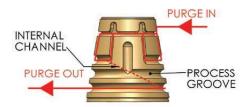

### **Conical Rotor**

The OLP type protects against fugitive emission and inboard diffusion.

The CLP type purge allows extra cross-port leak protection and the valve is self-cleaning.

















Cross Over

Sample Stream Selection





On / Off



### **TOOLKIT**



### ■ TK-01 : ELDV / MDVG-SERIES

These tools are used to replace:

• Diaphragm

• Valve head

- Actuation Kit

# ■ TK-02 : RV / IRV-SERIES These tools are used for: • Rotor replacement

- Rotor pressure adjustment

**TK-03 : DV-SERIES**These tools are used to replace:

- DiaphragmValve head
- Actuation Kit

### ■ TK-04 : EAC / PNC-SERIES

- These tools are used for:

   Valve / standoff replacement

   Stroke adjustment (PNC)

### ■ TK-05 : FITTINGS

These tools are used for:

• Proper fitting installation