


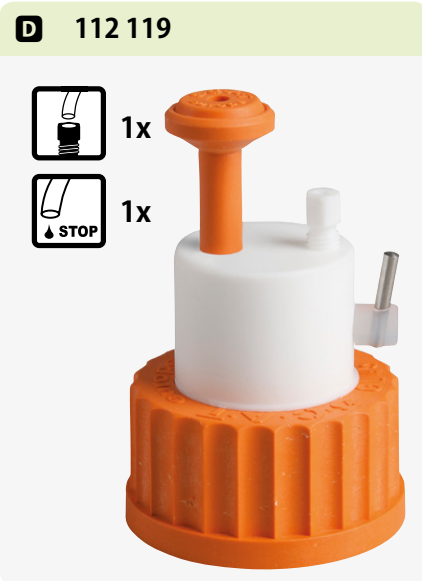


# GL 45 fire-resistant



### Change every 6 months

Since the filter membrane absorbs contaminants from the surrounding air, it is necessary that the valve be replaced every 6 months in order to ensure flawless operation.



Fig.	Part No.	Description	 Thread size	 Connectors Ø 3.2 mm OD	 of which with shut-off
<b>D</b>	112 119	SafetyCap I (fire-resistant) with shut-off	GL 45	1x	1x
-	112 919	SafetyCap II (fire-resistant) with shut-off	GL 45	2x	2x
-	112 920	SafetyCap III (fire-resistant) with shut-off	GL 45	3x	3x
-	112 419	SafetyCap IV (fire-resistant) with shut-off	GL 45	4x	4x
-	112 519	SafetyCap VI (fire-resistant) with shut-off	GL 45	6x	6x
-	112 219	SafetyCap II (fire-resistant) with shut-off <b>(combined)</b>	GL 45	<b>2x</b>	<b>1x</b>
-	112 319	SafetyCap III (fire-resistant) with shut-off <b>(combined)</b>	GL 45	<b>3x</b>	<b>2x</b>
<b>E</b>	112 010	Air valve (fire-resistant) for SafetyCaps	UNF 1/4" 28G	-	-